



INSTALLATION INSTRUCTIONS


Accessory DOOR EDGE FILMS P/N 08P20-SZT-100	Application 2011 CR-Z	Publications No. All 43557
		Issue Date AUG 2010

PARTS LIST


Left door edge film




Right door edge film

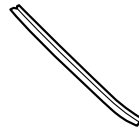


Applicator

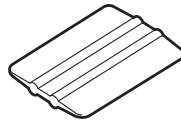

Soft sleeve

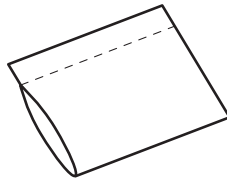

2 Alcohol wipes

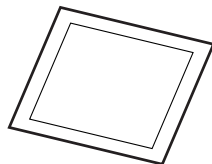

TOOL AND SUPPLIES REQUIRED


Shop towel

Spray bottle

3M Protective tape application solution

Tape measure

Illustration of the Door Edge Films Installed on the Vehicle

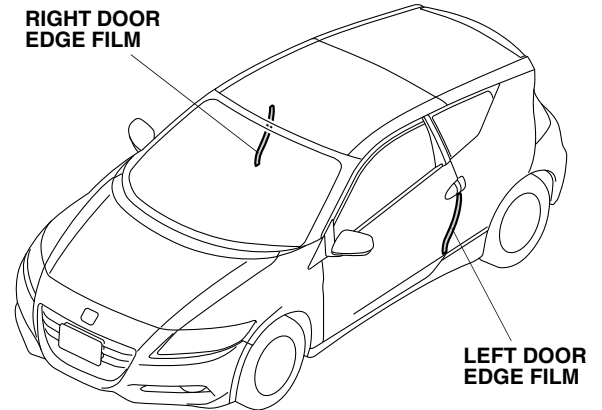

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

NOTE:


- Do not damage the vehicle body paint finish.
- This kit should only be installed if the ambient air temperature is 15°C (60°F) or above.
- To allow the adhesive to cure, do not wash the vehicle for 24 hours. Please advise the customer.
- Identify each door edge film by referring to the identification mark.
- Wash your hands thoroughly with soap and water when handling the door edge films.

Installing the Door Edge Films


1. Open the driver's door. Using the alcohol wipe, thoroughly clean the driver's door where the left door edge film will attach.

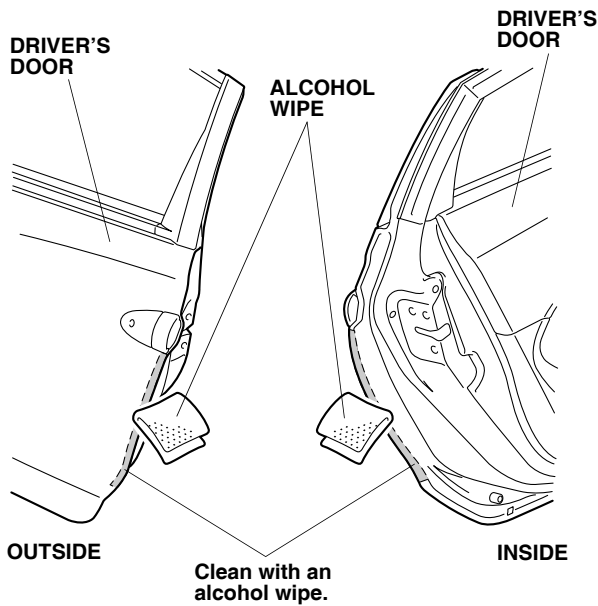


2. Close the driver's door. Using a spray bottle with 3M protective tape application solution, spray the outside of the driver's door where the left door edge film will attach.
NOTE: Do not spray the inner surface of the driver's door.

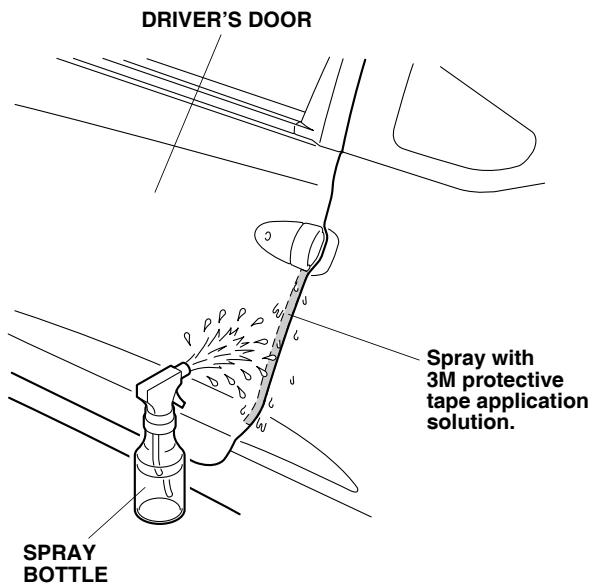


3. Open the driver's door. Peel back about 50 mm of the adhesive backing from the left door edge film. Align the v-notch on the left door edge film to driver's door as shown.

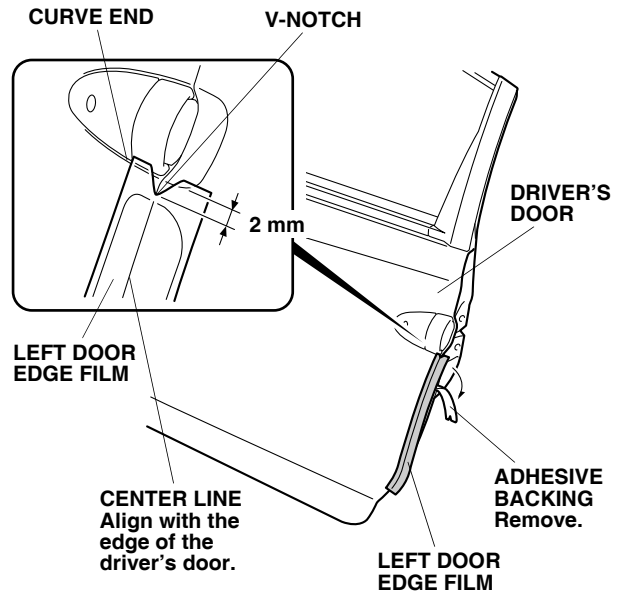


4. While applying light pressure, align the center line on the left door edge film to the edge of the driver's door, carefully remove the adhesive backing, and attach the left door edge film to the driver's door.
5. Insert the applicator into the soft sleeve. Starting from the middle and working outward, use the applicator and soft sleeve to smooth out the left door edge film.
NOTE: Move the applicator in one direction only.

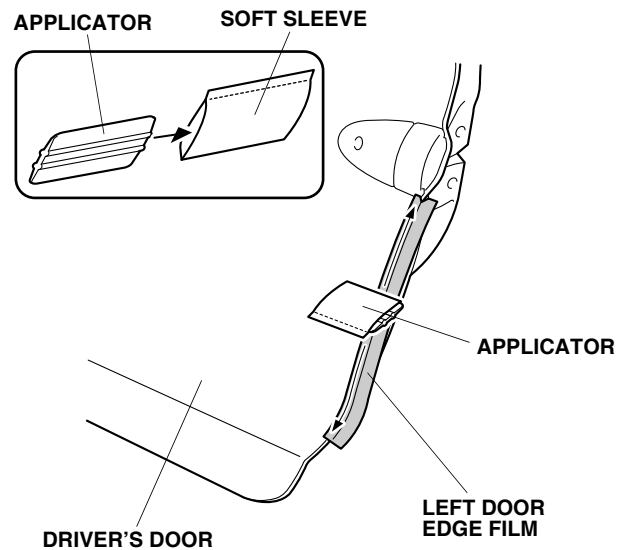


- Slowly remove the protective film from the left door edge film.

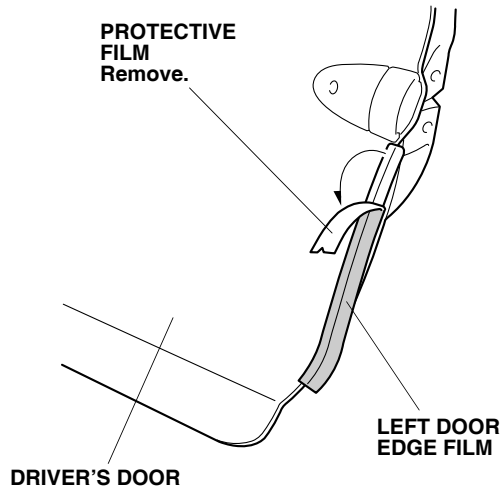

- Starting from the top and working downward, use the applicator and soft sleeve to fold the left door edge film inside the driver's door as shown. NOTE: Move the applicator in one direction only. Do not damage the door seam sealant.

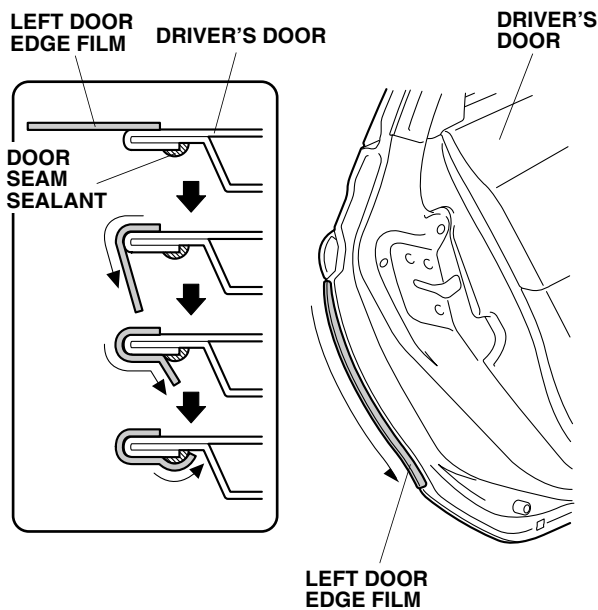

- Using a shop towel, wipe the excess 3M protective tape application solution from the left door edge film. NOTE: Allow the left door edge film to dry thoroughly.

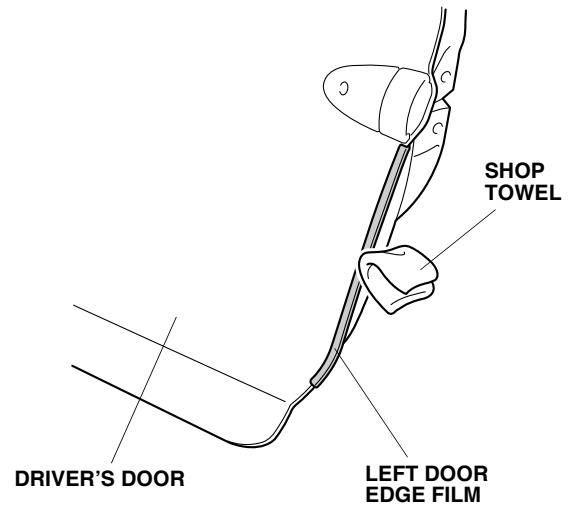

- Repeat steps 1 through 8 on the right side of the vehicle.