



INSTALLATION INSTRUCTIONS


Accessory
AMBIENT LIGHTS
P/N 08E10-TK8-101

Application
2017 ODYSSEY


Publications No.
VERSION 1
Issue Date
DEC 2016

PARTS LIST


2 Ambient lights

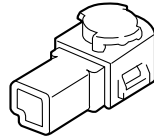


Ambient light harness

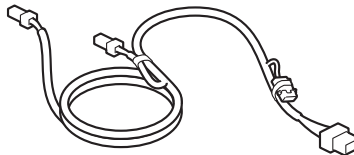

13 Wire ties



Fuse label



TOOLS AND SUPPLIES REQUIRED

Isopropyl alcohol

Shop towel


Diagonal cutters

10 mm Open end wrench

The following tool is available through the Honda Tool and Equipment Program. On the iN, click on: Service > Service Bay > Tool and Equipment Program, then enter the number under "Search". Or, call 888-424-6857.

- Trim Tool Set (T/N SOJATP2014)
- Plastic Trim Tool (T/N SILTRIMTL10)

Illustration of the Ambient Lights in the Vehicle

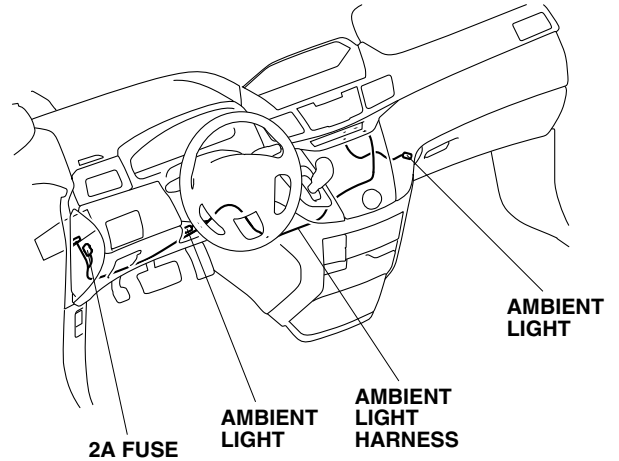


INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your vehicle. These procedures should not be attempted by "do-it-yourselfers."

1. Make sure you have the anti-theft code for the audio unit and navigation system (if equipped), then write down the radio station presets.
2. Disconnect the negative cable from the battery, then wait at least 3 minutes before starting work.


3. Remove the front passenger's under cover.

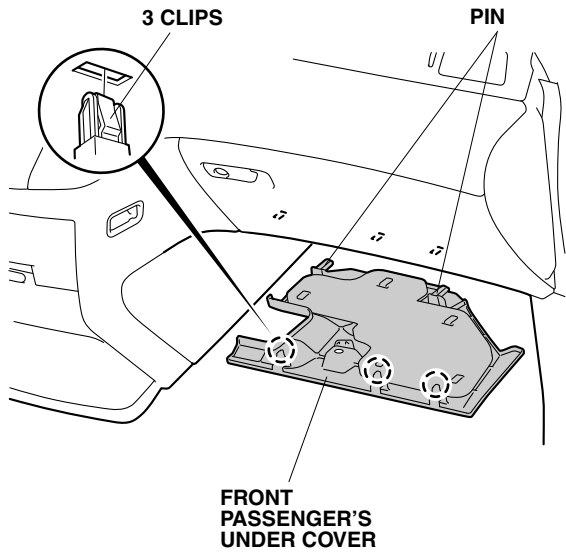


4. Remove the dashboard driver's side panel.

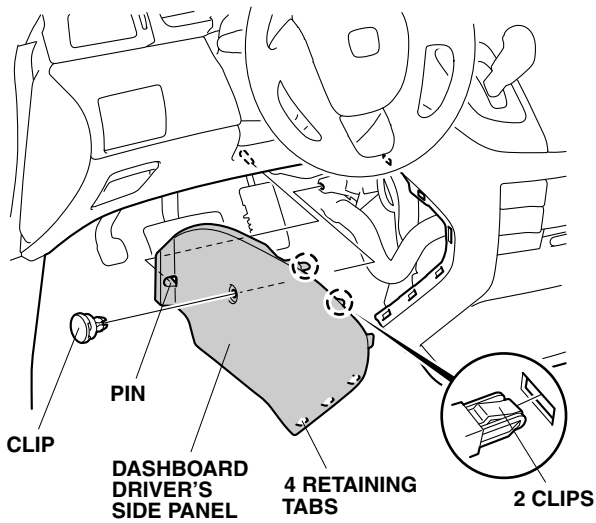


5. Remove the dashboard passenger's side panel.

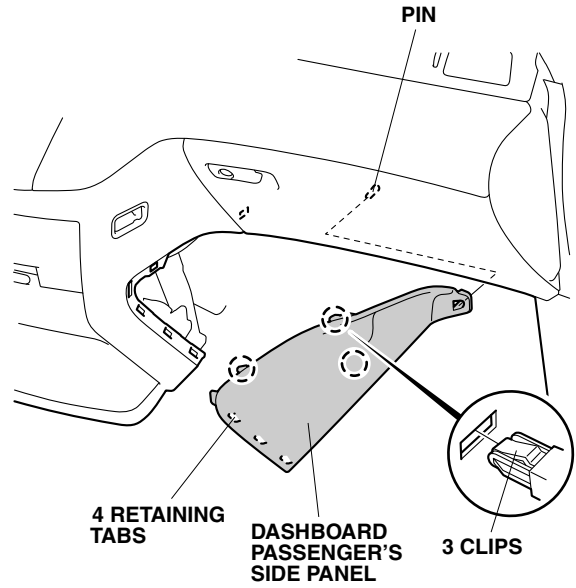


6. Using isopropyl alcohol on a shop towel, thoroughly clean the fuse case where the fuse label will attach. Attach the 2A fuse label to the fuse case on the ambient light harness.

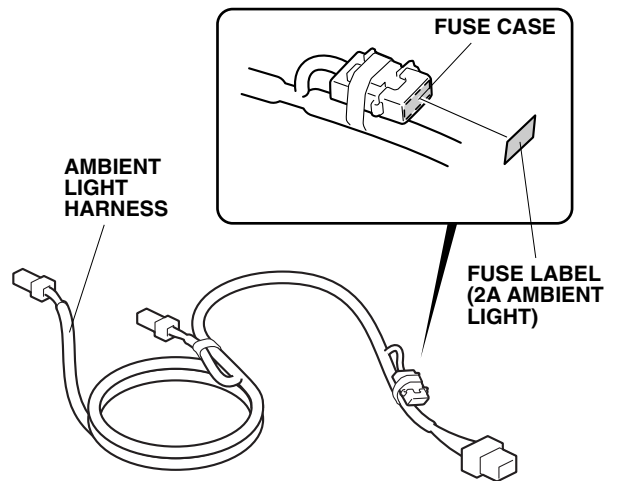


7. Plug the ambient light harness 12-pin connector into the driver's fuse box.

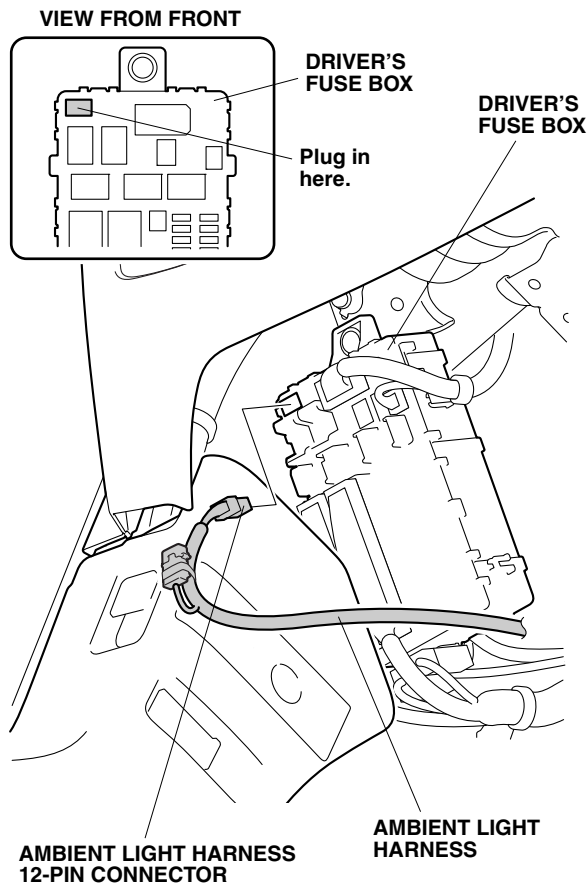


8. Secure the ambient light harness to the vehicle harness with one wire tie.

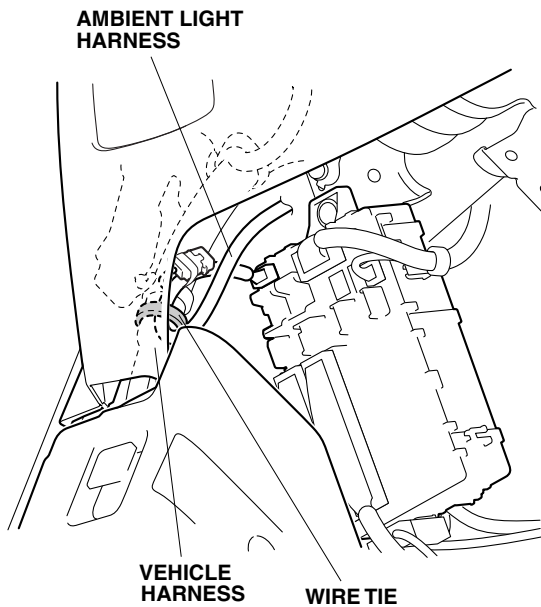

9. Install the ambient light into the hole in the dashboard as shown.

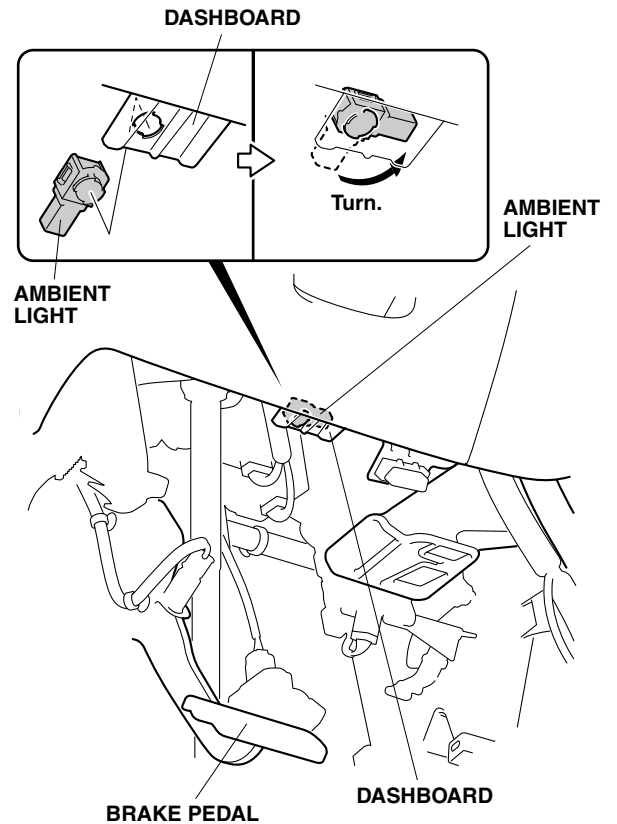


10. Route the ambient light harness to the center console as shown.

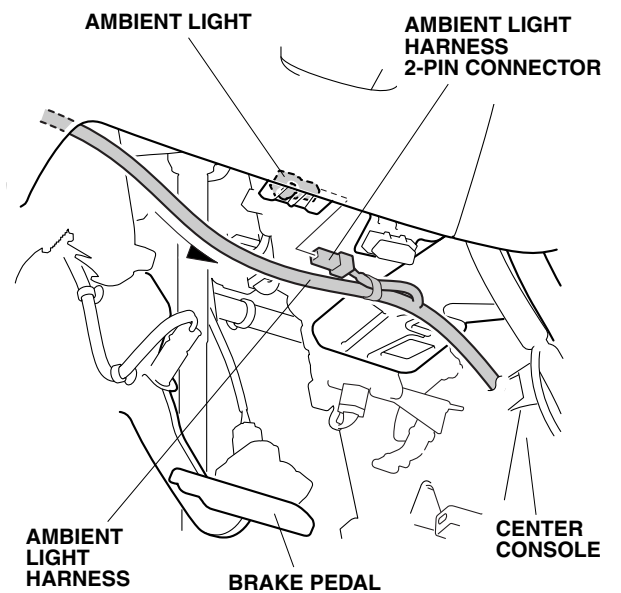


11. Plug the ambient light harness 2-pin connector into the ambient light.


12. Secure the ambient light harness to the vehicle frame and vehicle harness with two wire ties.

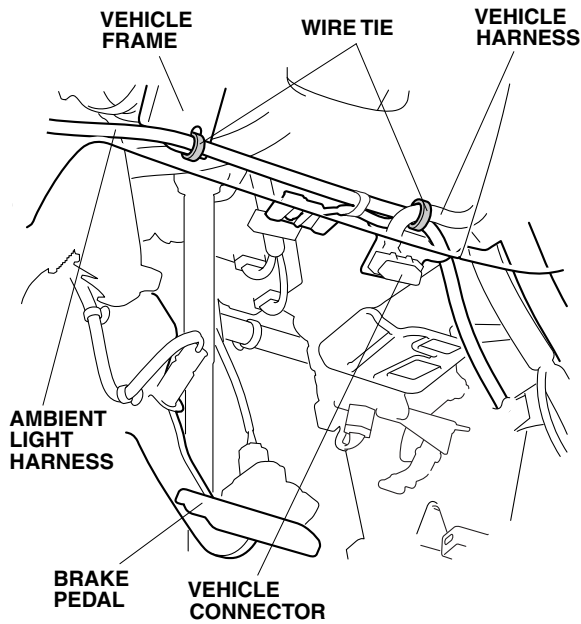


13. Route the ambient light harness through the center console, and secure it to the vehicle harness with three wire ties. Secure the wire tie next to the vehicle clip.

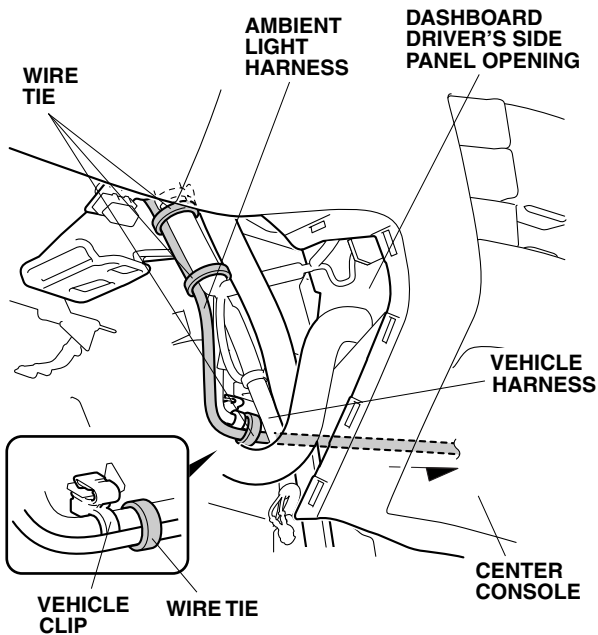


14. Route the ambient light harness along the vehicle harness, and secure it to the vehicle harness with two wire ties. Secure the wire tie next to the vehicle clip.

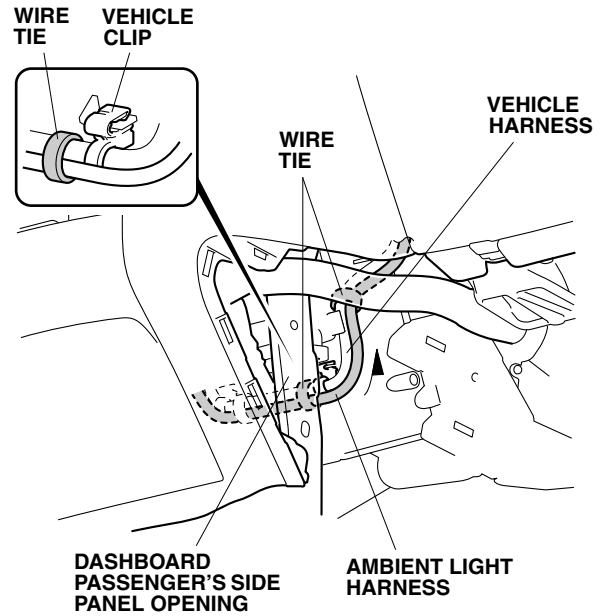


15. Route the ambient light harness along the vehicle harness, and to the blower motor. Secure the ambient light harness to the vehicle harness with two wire ties. Secure the wire tie next to the vehicle clip.

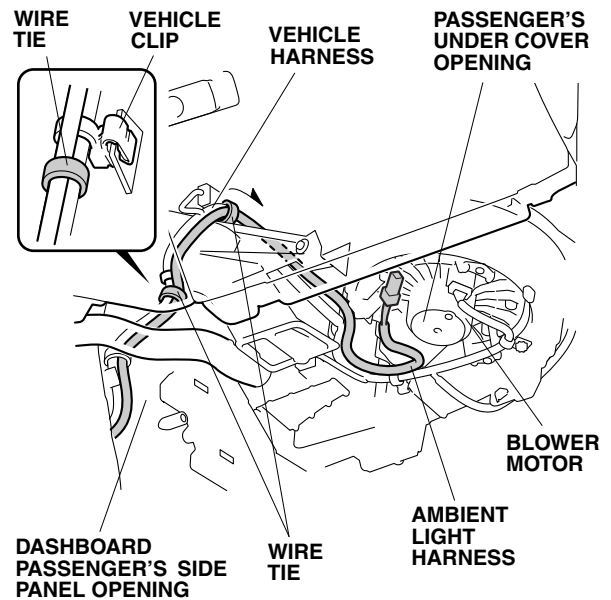


- Secure the ambient light harness to the vehicle harness with three wire ties. Secure the wire tie next to the vehicle clip.

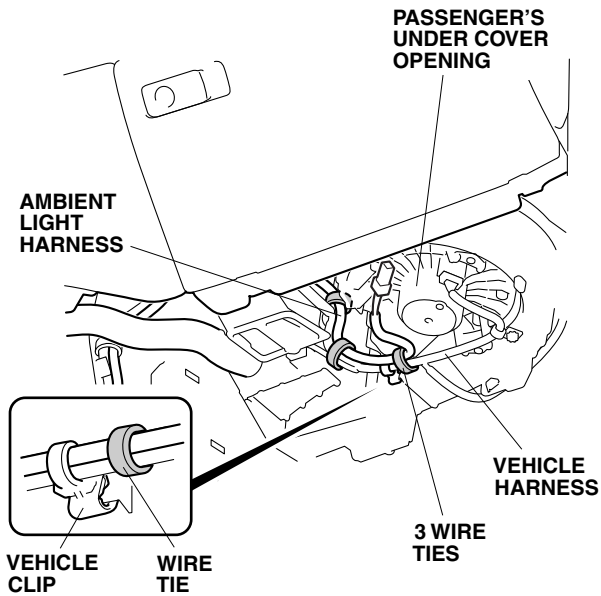

- Install the ambient light into the passenger's under cover as shown.

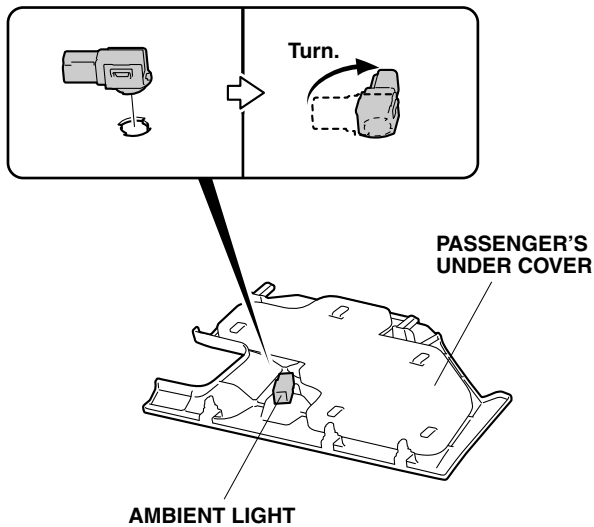

- Install the dashboard passenger's side panel.

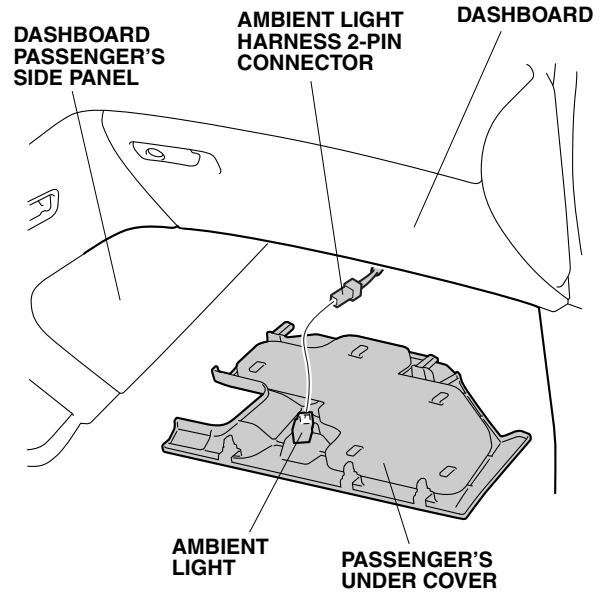

- Move the passenger's under cover near the dashboard, plug the ambient light harness 2-pin connector into the ambient light, and reinstall the passenger's under cover.
- Check that all wire harnesses are routed properly and all connectors are plugged in.
- Install all removed parts.
- Connect the negative cable to the battery.
- Enter the anti-theft code for the audio unit and navigation system (if equipped), and reset the radio station presets.
- Set the clock on vehicles without navigation.